
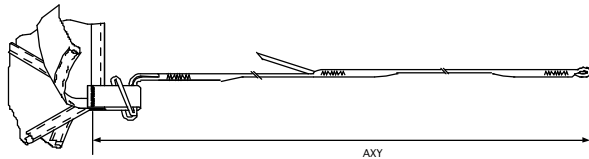

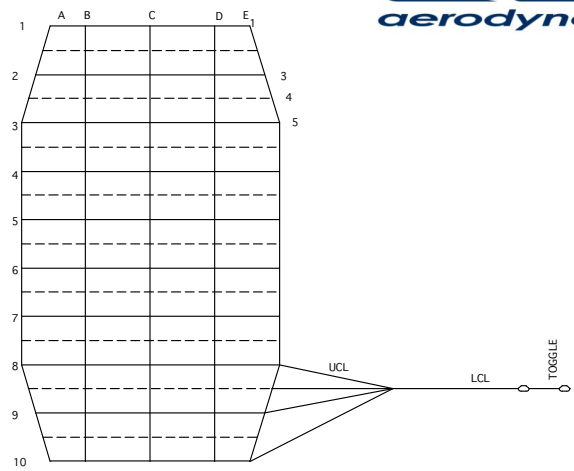


ZULU

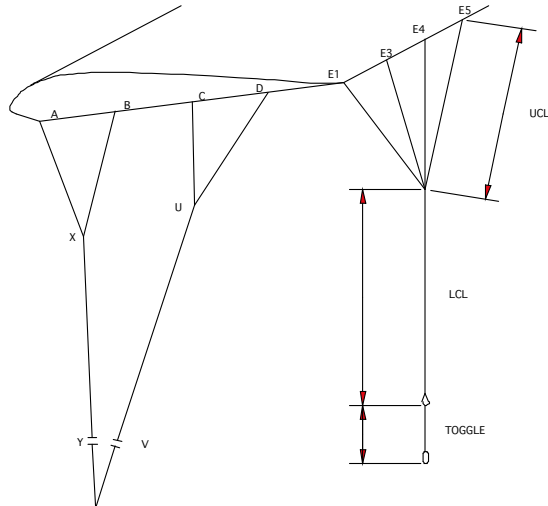

ENSURE LOOPS ARE HELD EVENLY AND SECURELY.
EACH LINE TO BE LOADED TO 4.5KG DURING
MEASUREMENT.
MEASURE THE DEPLOYMENT BRAKE SETTING WITH
THE TOGGLES STOWED.
MEASURE THE FULL FLIGHT SETTING WITH THE
TOGGLES UNSTOWED.

MEASURE FROM END OF SUSPENSION LINE LOOP TO
BARTACK ON SUSPENSION LINE ATTACHMENT TAB.

Canopy	102	112	122	132	152
AXY1	88 5/8	94 7/8	99 6/8	104 6/8	115
A1-B1	1 3/8	1 5/8	1 3/8	1 5/8	1 1/8
A1-C1	5 4/8	5 4/8	5 4/8	5 7/8	6 2/8
A1-D1	10 5/8	11	11 2/8	11 6/8	12 5/8
AXY2	88 5/8	94 7/8	99 6/8	104 6/8	115
A2-B2	1 5/8	1 5/8	1 5/8	1 5/8	1 5/8
A2-C2	6 2/8	6 4/8	6 6/8	6 6/8	7 4/8
A2-D2	12 3/8	13	13 3/8	13 6/8	15
AXY3	88 5/8	94 7/8	99 6/8	104 6/8	115
A3-B3	1 5/8	1 5/8	1 5/8	1 5/8	1 5/8
A3-C3	6 6/8	6 6/8	7 1/8	7 2/8	7 7/8
A3-D3	13 3/8	13 6/8	14 3/8	14 6/8	16
LCL	70 1/8	73 2/8	79 1/8	82 2/8	87 5/8
TOGGLE	14	15	15 3/8	15 6/8	16 7/8
ULC1	30 4/8	32 2/8	32 2/8	33 4/8	37 6/8
UCL3	32 2/8	34 2/8	33 4/8	34 5/8	39 3/8
UCL4	33 7/8	35 7/8	35 2/8	36 5/8	41 6/8
UCL5	38 3/8	42 1/8	42 7/8	41 3/8	45 2/8

All dimensions in inch

VER 0.1